



3-Phase SSR With Detachable / Integrated Heatsink

SR3 / SRH3 Series PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use or store the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Install the device on DIN Rail or in panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- 06. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- 03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.
- 04. Since leakage current still flows right after turning off the power or in the output OFF status, do not touch the load terminal.**
Failure to follow this instruction may result in electric shock.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 4 - 30 VDC~, 24 VAC~ model per supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- For the Detachable heatsink model, Autonics does not provide or sell a heatsink.
- Attach a heatsink or install the unit in the well ventilated place. If the area is poorly ventilated, install a cooling fan.
To attach the heatsink, use Thermal Grease as below or that of equal specification.
- Thermal Grease: GE TOSHIBA (YG6111), KANTO-KASEI (FLOIL G-600), SHINETSU (G746)
- Ground to the heatsink, inside the panel, or DIN Rail. Failure to follow this instruction may result in electric shock.
- While supplying power to the load or right after turning off the power of the load, do not touch the body and heatsink. Failure to follow this instruction may result in burn due to high temperature of the surface.
- In order to protect the product from the short-circuit current of the load, use rapid fuse of which I²t is under the 1/2 of SSR I²t. When short-circuited, replace the fuse to those of same specification with the used rapid fuse.

- Install dummy resistance in parallel with the load, to keep the sum of current flowing in the load and dummy resistance being over SSR minimum load current.
- When using random turn-on model for phase control, install noise filter between the load and the power of the load.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category III

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

SR ① ② - ③ ④ ⑤ ⑥

① Type

No mark: Detachable heatsink
H: Integrated heatsink

② Number of the control phase

3: 3-phase

③ Rated input voltage

1: 4 - 30 VDC
2: 24 VAC
4: 90 - 240 VAC

④ Rated load voltage

2: 24 - 240 VAC
4: 48 - 480 VAC

⑤ Rated load current

Number: Rated load current (unit: A)

⑥ Function

No mark: Zero cross turn-on
R: Random turn-on

Product Components


- Product
- Instruction manual
- [SRH3 rated load current 15 / 30 / 40 A model] DIN Rail bracket × 2

Cautions during Installation

- Install by tightening the screws into the mounting holes.
[SRH3 rated load current 15 / 30 / 40 A model] It can be mounted on a DIN Rail. Refer to 'DIN Rail Mounting'.

■ Spacing

- When installing multiple SSRs, be sure to keep space between SSRs for heat radiation.
- When installing SSRs horizontally (input part and output part on the same height), be sure to supply less than 50 % of the rated load current.

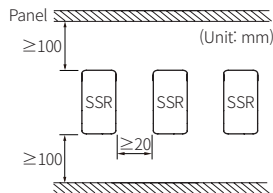

■ Specifications of cooling fan


- Autonics does not provide or sell a cooling fan. Buy directly a cooling fan.

Load capacity	Cooling fan type	Size	Rated air flow ⁰¹⁾	
			m ³ /min	CFM
30 / 40 A	AC Fan	80 × 80 mm	0.68	24.0
	DC Fan		1.25	44.0
50 / 75 A	AC Fan	92 × 92 mm	1.13	40.0
	DC Fan		1.80	63.5

01) The cooling fan should be over the rated air flow value.

■ Grounding

- Be sure to ground the bolts for grounding.

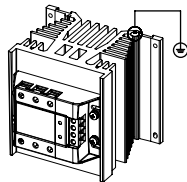


DIN Rail Mounting

- It can be mounted on a 35 mm DIN Rail conforming to EN 60715 standards.


■ Mounting with DIN Rail

Put the product on DIN Rail and press it to the direction ①.

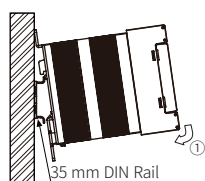

■ Removing with DIN Rail

Push the latch to the direction ① with a tool and pull the bottom of the device in the direction ②, then lift the product.

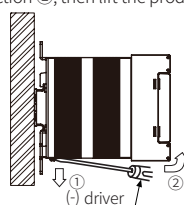

Specifications

■ Input

Rated input voltage range		4 - 30 VDC≡	24 VAC~ (50/60 Hz)	90 - 240 VAC~ (50/60 Hz)
Allowable input voltage range		4 - 32 VDC≡	19 - 26.4 VAC~ (50/60 Hz)	85 - 264 VAC~ (50/60 Hz)
Max. input current		25 mA	15 mA	25 mA
Operating voltage		≥ 4 VDC≡	≥ 19 VAC~	≥ 85 VAC~
Releasing voltage		≤ 1 VDC≡	≤ 4 VAC~	≤ 10 VAC~
Operating time	Zero cross turn-on	≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms
	Random turn-on	≤ 1 ms	-	-
Release time		≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms

■ Output

Rated load voltage range		24 - 240 VACrms~ (50/60 Hz)			
Allowable load voltage range		24 - 264 VACrms~ (50/60 Hz)			
Rated load current ⁰¹⁾	Resistive load (AC-1) ⁰²⁾	15 Arms	30 Arms	50 Arms	75 Arms
Min. load current		0.15 Arms	0.2 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)		250 A	400 A	800 A	1,000 A
Max. non-repetitive surge current (I ² t, t = 8.3 ms)		340 A ² s	800 A ² s	3,000 A ² s	4,000 A ² s
Peak voltage (non-repetitive)		600 V			
Leakage current (Ta = 25 °C)		≤ 10 mArms (240 VAC~/60 Hz)			
Output ON voltage drop [Vpk] (max. load current)		≤ 1.6 V			
Static off state dv/dt		500 V/μs			

Rated load voltage range		48 - 480 VACrms~ (50/60 Hz)				
Allowable load voltage range		48 - 528 VACrms~ (50/60 Hz)				
Rated load current ⁰¹⁾	Resistive load (AC-1) ⁰²⁾	15 Arms	30 Arms	40 Arms	50 Arms	75 Arms
Min. load current		0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)		250 A	400 A	800 A	800 A	1,000 A
Max. non-repetitive surge current (I ² t, t = 8.3 ms)		340 A ² s	800 A ² s	3,000 A ² s	3,000 A ² s	4,000 A ² s
Peak voltage (non-repetitive)		1,200 V (zero cross turn-on), 1,000 V (random turn-on)				
Leakage current (Ta = 25 °C)		≤ 10 mArms (480 VAC~/60 Hz)				
Output ON voltage drop [Vpk] (max. load current)		≤ 1.6 V				
Static off state dv/dt		500 V/μs				

01) Based on ambient temperature of 25°C

02) AC-1 is utilization category at IEC60947-4-3.

■ General specifications

Dielectric strength	Between the live part and the case : 2,500 VAC~ 50 / 60 Hz for 1 min
Insulation resistance	Input-output, input/output-case : ≥ 100 MΩ (500 VDC≡ megger)
Indicator	Input indicator (green)
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min
Shock	300 m/s ² (≈ 30 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times
Ambient temperature ⁰¹⁾	-30 to 80 °C (in case of the rated input voltage 90 - 240 VAC~ : -20 to 70 °C), storage: -30 to 100 °C (no freezing or condensation)
Ambient humidity	45 to 85%RH, storage: 45 to 85%RH (no freezing or condensation)
Input terminal connection	≥ 1×0.5 mm ² (1×AWG 20), ≤ 1×4.0 mm ² (1×AWG 12) or ≤ 2×1.5 mm ² (2×AWG 16)
Output terminal connection ⁰²⁾	≥ 1×1.5 mm ² (1×AWG 16), ≤ 1×16 mm ² (1×AWG 6) or ≤ 2×6 mm ² (2×AWG 10)
Input terminal	M3 (Fixed torque 0.75 to 0.96 N m)
Output terminal	M5 (Fixed torque 1.6 to 2.2 N m)
EMS	EN61000-6-2 compliance
EMI	EN61000-6-4 compliance
Certification	CE UK RoHS

01) Refer to the 'SSR Derating Curve' in the product manual because the capacity of the rated load current is differ depending on the ambient temperature.


02) Connect the wire met the capacity of the load current to the output terminal.

		Weight (packaged)
Detachable heatsink type		≈ 280 g (≈ 360 g)
Integrated heatsink type	15 / 30 / 40 A	≈ 930 g (≈ 1,180 g)
	50 A	≈ 1,520 g (≈ 1,730 g)
	75 A	≈ 2,320 g (≈ 2,580 g)


Connections

- Connect a CAP (capacitor) to the output terminal to meet EMC standards.
- Rated load voltage 24 - 240 VAC~: 1uF / 250 VAC~
- Rated load voltage 48 - 480 VAC~: 0.47uF / 500 VAC~

■ Delta connection (△ connection)

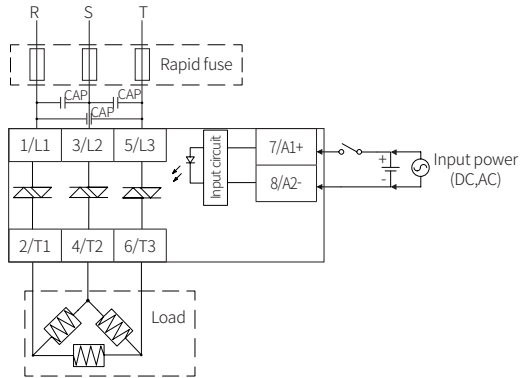

■ Star connection (Y connection)

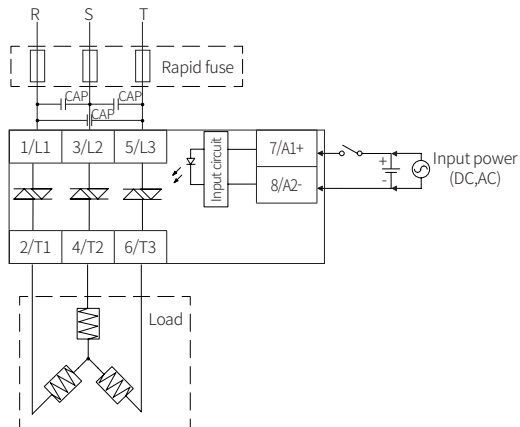

Crimp Terminal Specifications

- Unit: mm, When connecting the wire to the terminal, use the round crimp terminal. Use UL approved crimp terminals that meet the sizes below.



Size	Input	Output
a	≥ 3.0	≥ 5.0
b	≤ 6.0	≤ 12.0


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

A Input indicator (green)


- When installing to the panel, tightening the detachable heatsink type screw with a torque of 2.5 to 3 N m, for the integrated heatsink type screw, tighten with a torque of 1.35 N m.

■ Detachable heatsink type

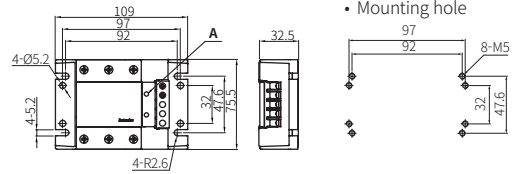


■ Integrated heatsink type


- Rated load current 15 / 30 / 40 A

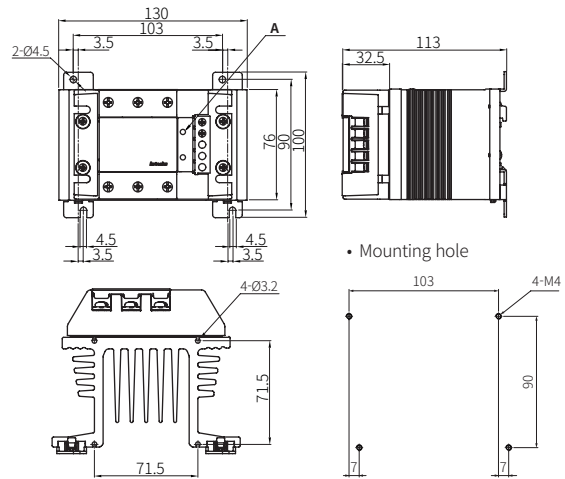

- Rated load current 50 A

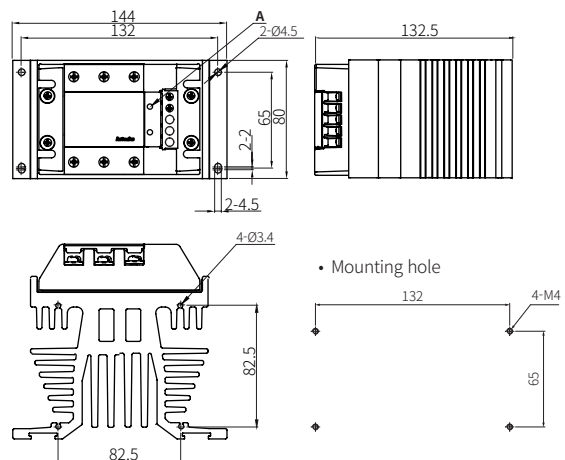


- Rated load current 75 A

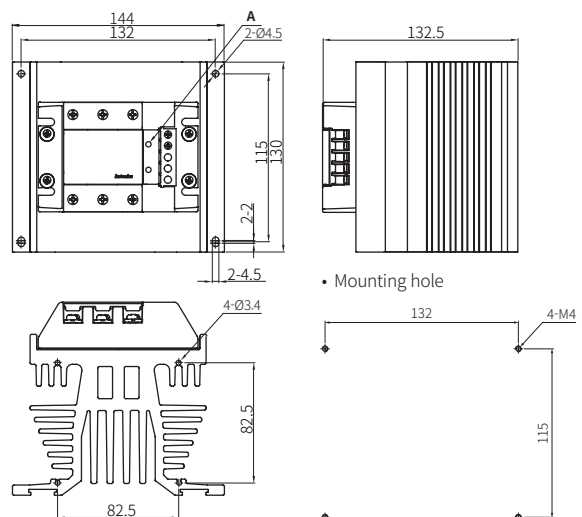


Cooling fan mounting hole

- Rated load current 30 / 40 A

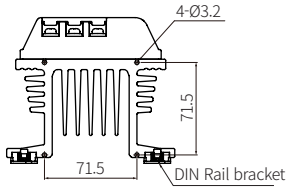


- Rated load current 50 / 75 A

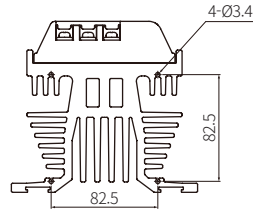

Turn-on delay time

- Turn-on delay time may increase under low applied voltage or current conditions. Check that no issues occur before use.

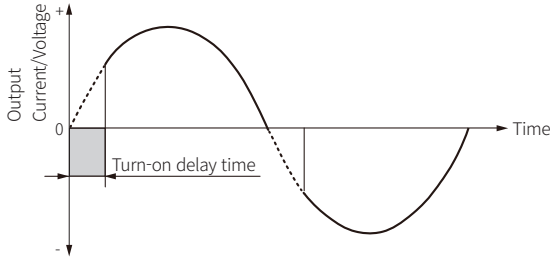


SSR Derating Curve


- The heatsink of the curves is dedicated for the SRH3.
- Install SR3 Series on the metal plate (min. 130 × 120 mm).
- Be aware that the ambient temperature and the derating curve is different by the rated input voltage when using the product.
- ⚠ Since the effectiveness of the heat radiation is decreased when multiple SSRs are installed closely, be sure to supply less than 50 % of the rated load current.
- SSR derating curves obtained approval from the UL certification authority.

—	With heatsink+Cooling fan
—	With heatsink
—	Without heatsink


SR(H)3-1□15(R)/2415

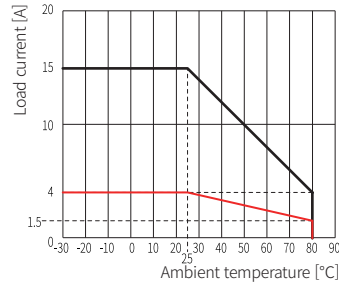


SR(H)3-4□15

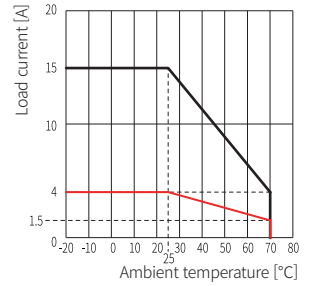


SR(H)3-1□30(R)/2430

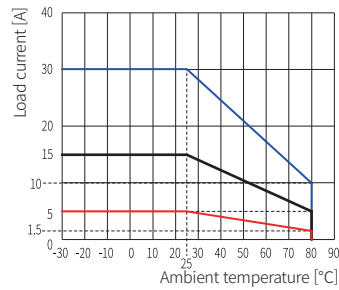


SR(H)3-4□30

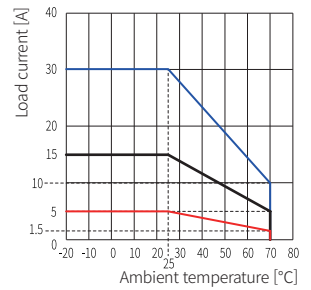


SR(H)3-1440(R)/2440

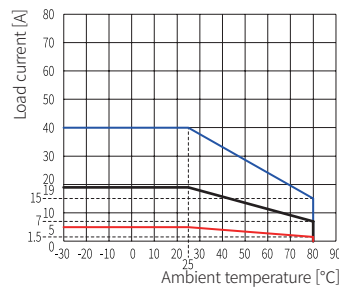


SR(H)3-4440

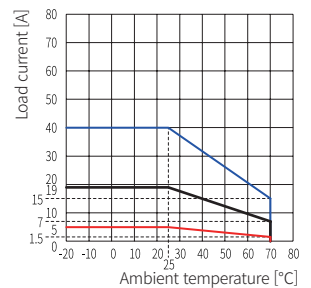


SR(H)3-1□50(R)/2450

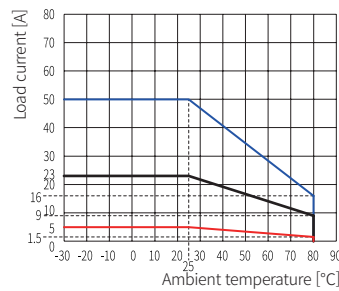

SR(H)3-4□50

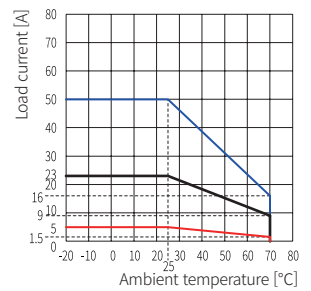

SR(H)3-1□75(R)/2475

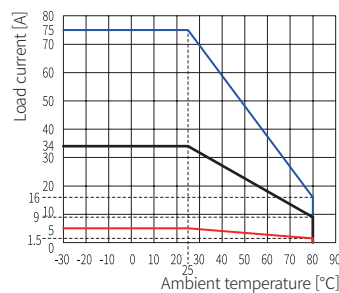

SR(H)3-4□75

